

PARTS LIST

1. MAIN BODY
2. MAIN LID
3. INNER CONVENIENCE LID
4. COLLECTION BUCKET
5. PERFORATED DRAINAGE PLATE
6. DRAINAGE PAD
7. DRAINAGE ASSEMBLY
 - A. SMALL HEX CONNECTOR
 - B. LARGE HEX CONNECTOR
 - C. CLEAR TUBE
 - D. PINCH VALVE
 - E. END CAP
8. INNER LID HARDWARE *
 - A. BOLT (1)
 - B. NUT (1)
 - C. WASHERS (2)
9. HINGE HARDWARE FOR MAIN LID *
 - A. BOLT (2)
 - B. NUT (2)
 - C. WASHERS (4)

• *Please note that all bolts, nuts and washers are the same size*




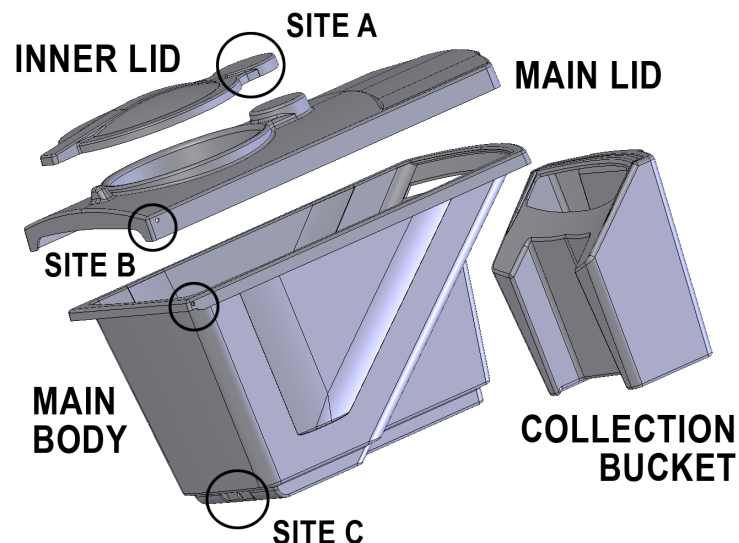


DIAGRAM 1

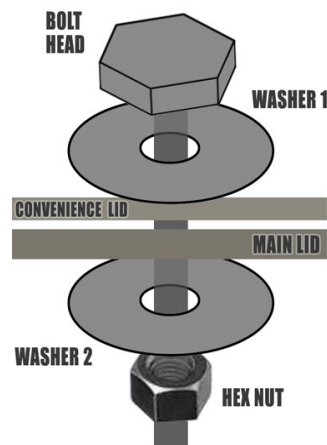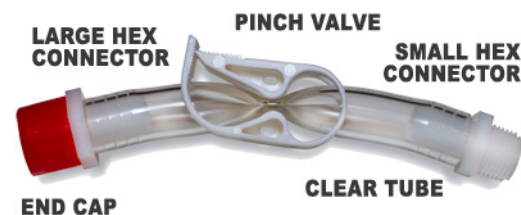

BioPod™ Plus

Quick Assembly Instructions

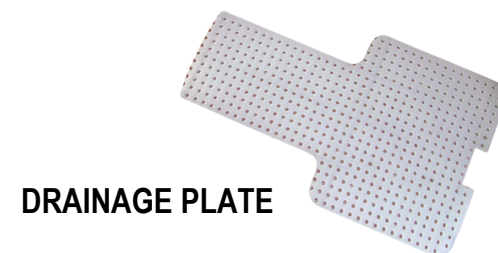

DRAINAGE ASSEMBLY



DRAINAGE PAD

STEP 1. Requirements

1. Full Shade * Level Surface * Elevate (if possible)

STEP 2. Lid Assembly

1. Attached inner lid to main lid as shown in DIAGRAM 1 – SITE A
2. Attach assembled lid to main body – SITE B
3. To protect the plastic, washers are placed adjacent to bolt head and nut
4. Do not over tighten – parts must be able to pivot

STEP 3. Drainage System

1. Assemble drainage parts as seen in photo “DRAINAGE ASSEMBLY”
2. Attach assembled drainage system to main body – SITE C
3. Place perforated drainage plate in base of main body
4. Place poly mesh drainage pad or natural coir pad on top of drainage plate

STEP 4. Collection Bucket

1. Line up the harvest slit in the main body with the bucket opening

Complete Manual and User's Guide may be downloaded online at:
<http://www.protapodusa.com/biopod-plus.html> or www.ProtaPodUSA.com